

# **Digital force gauge DSV/DST series**

- Ideal for hand-held use due to the hand fitting design and the lightweight
- Easy data management and OK judgement
- In capacity up to 1000N, handling a wide range of force testing



## Newly added functions to improve work efficiency

DSV sounds alarms when you tilt it to right/left or	You can connect maximum 4 pcs of DSV/DST to PC
up/down from the preset position, for greater	at the same time, for easier management.
accuracy.	
Beep sound	
- DSV has tilt-sensing function, sounding alarms when it senses a	- You can record acquired data, date, OK judgement.
tilt from the pre-set position.	* You need a dedicated optional software for this.
- When it sounds an alarm, "NG" is recorded.	
* DST does NOT have the tilt-sensing function.	
You can prevent DSV/DST from sensor-breakdown	DSV/DST has longer battery life and great
due to mechanical stopper.	portability.
- DSV/DST-2N/5N/20N/50N has mechanical stopper for	- Battery life lasts 30 hours at maximum when its backlight is
overload preventing.	off.
* You cannot prevent overload in some cases.	- You can charge it from a PC or a mobile battery.



## [Main functions]

<ul> <li>Indicate force digitally</li> <li>Digital indication offers NO individual</li> <li>differences in reading.</li> <li>Reversible indication</li> <li>The indication can be turned upside down as desired with simple button operation.</li> </ul>	FORCE MEASUREMENT IMAA DA	<b>O</b> You can easily attach an attachment. Thread is M6 screws, and IMADA attachments are designed to fit into the thread. A plastic nut is supplied to adjust attachment's position.
©OK judgement You can set upper/lower limit, then, it indicates OK. ©Display		©Settings You can set up about peak capturing mode, upper/lower limit, operation sound, etc.
Time, battery life, and other information can be indicated as desired. It can indicate the last values, or peak & real time values at the same time.	DSV-50N	<b>©Hand fitting design</b> You can apply force stably due to easy- gripping shape and durable aluminum die- casting body.
©Calibration schedule reminder You can set up the desired date for next calibration, then on 30 days before the set date, it reminds you of the next calibration by a message on its monitor.		©Connector for USB & RS232C It equips connectors for USB cable and RS232C. You can charge it from a PC or a mobile battery using a supplied USB cable.

[Other functions]	
	DGV

DSV & DST	DSV only
Sensitivity	Tilt-sensing alarm
Sign inversion	Continuity peak mode
Setting lock	Internal memory (1000 points)
Off timer (auto power-off)	
Overload alarm	

# [6 supplied attachments]

DSV and DST come with the 6 attachments below. You can perform simple compression / tension test using the attachments.

Small hook	Flat tip	Conical tip	Chisel tip	Notched tip	Extension shaft
A-1(S-1 *1)	A-2(S-2)	A-3(S-3)	A-4(S-4)	A-5(S-5)	A-6(S-6)
2					j

\* DSV(DST)-2N/5N/20N/50N come with aluminum attachments(A-type). DSV(DST)-200N/500N/1000N come with steel made attachments(S-type). \*1 DSV(DST)-1000N come with SR-1.



#### [DS specifications]

Model	DSV	DST		
Accuracy	$\pm 0.2\%$ F.S.(full scale) $\pm 1$ digit			
Unit	N(mN, kN), kgf(gf), lbf (*1)			
Display	4-digi	t LCD		
Sampling rate	Max. 100	0 data/sec		
Battery	Approx.30 hours (when back light is off) Approx.14 hours (when back light is on) (need 4.5 hours for full charge)			
Overload	Approx.2	200%F.S.		
Power	Nickel-Metal Hydride battery (NiMH battery) , USB charge(PC, mobile battery, AC adapter)			
Operating environment	Temperature : 0 - 40°C, Humidity : 20 -80%RH			
Functions	Peak hold(Tensile or compression)/Comparator(OK Judgement)/Sensitivity(3 steps)/ Reversible display /Sign inversion/Setting lock/Date & Time/Off timer (Auto power-off)/ Reminder for calibration schedule/Overload alarm Tilt-sensing alarm/Continuity peak mode(*2)			
Output	/Internal memory (1000 point) USB/RS232C			
Overload alarm	Alarm to notify "near-overload state": Approx. 90%F.S. (Alarm sound) Alarm to notify "overloaded state": Approx.110%F.S. (Alarm sound / Indication blinking)			
Weight	Aprrox.460g (*3)			
Dimensions	Refer to Dimensions on page 5.			
Accessories	Force Logger(Data capturing software)/USB cable/AC adaptor/ Attachments (The types of attachments vary by models)/Carrying case/ Instruction manual/Inspection certificate			
	for International model. Note that the available units are			

\*1 These are the specifications for International model. Note that the available units are different from Japanese domestic model and international one. kN is available at 1000N, mN and gf is available at 2N and 5N ranges.

\*2 You cannot use Continuous peak mode when the measurement does not reach 10% of the force gauge's capacity. Instead, use Peak mode. Continuous peak mode could not fit enough for measurement with a shock such as break tests. Contact us for further details.

\*3 The weights are slightly different by the model.

#### [DS models]

Model	Capacity	Display	Resolution	Thread	Supplied attachments
DSV(DST)-2N	2N	2.000N	0.001N	M6	
DSV(DST)-5N	5N	5.000N	0.001N		A1~A6
DSV(DST)-20N	20N	20.00N	0.01N		
DSV(DST)-50N	50N	50.00N	0.01N		
DSV(DST)-200N	200N	200.0N	0.1N		
DSV(DST)-500N	500N	500.0N	0.1N		S1(SR1*)~S6
DSV(DST)-1000N	1000N	1000N	1N		

\*DSV(DST)-1000N come with SR-1, DSV(DST)-200N/500N come with S-1.



	<b>[er]</b> Using a supplied USB cable, you can easily transfer data form DSV(DST) to PC.			
	Features			
	You can continuously transfer data to PC at 10Hz with ease.			
🗧 data aggi - Force Logger — 👘 🖂	It automatically calculates Maximum, Minimum, and Average values.			
Tile Data Dipity CDV Print Sauge Setup Srformition DSX-SXe((572X)22(3) Data No. Force Unit Judge Provide Time Date Operator +	You can store data in CSV format.			
O,OO         N         1022         N         Orie         Netral         2010         217/38/23         James           20300         TDACK/FGAL         8         168         N         Nemal         03102         217/38/23         James	You can resister measurement conditions and measurer's name.			
Copuse Vale         START         1138         N         CK         Normal         8110         2177/17/21         James           SCopuse Vale         STOP         1134         N         CK         Normal         2177/16/21         James           STOP         5         5500         N         CK         Normal         2177/16/21         James	You can setup the force gauge's function.			
Text Condition         F         R0         Res = 0.011         21/701/20         Jame           welds A         Image: State				
Item         13.87         Low         11         31.2         N         NG         Nermal         03117         2172/07/37         James           Jornal         12         11.58         N         NS         Nermal         03117         2172/07/37         James	Operating environment			
Statutes         Final         H         Uzz         N         C         Final         Statutes         S	OS : 7/8/8.1/10 (64bit version is available)			
OK 18 776 N NS Skernal 33158 2117/38/29 James	Hardware : CPU Pentium4(1GHz more), Memory2GB, Hard disk : 10GB or more			
Connected	recommended Plat form : .NET Framework4 or later			
	Execute environment : Internet Explorer 6.0, Windows Installer3.1 or later Connection port : USB1.1, USB2.0 connector			
	Connection port . 05B1.1, 05B2.0 connector			
Advanced				
You can combine DSV(DST) with a test stand and software to				
Improve accuracy & afficiency in	massuring & data management			
Improve accuracy & efficiency in measuring & data management				
- You can apply load straight, reducing fluctuation.				
- Test stands apply high-capacity force such as 100kgf. Graphing software ZLINK4-E↑				
- Using a graphing software, you can s	see force transition visually. Manual test stand SVL-1000N $\rightarrow$			

## [Supplied Software : Force Logger] Using a supplied USB cable, you can easily transfer data form DSV(DST) to PC.




## [Related Products]

Graphing software : ZLINK4					
<ul> <li>You can draw a graph of force-time at 50Hz.</li> <li>You can determine time period for recording in trigger (auto start) function.</li> <li>You can save data in CSV format.</li> <li>You can connect DSV/DST to PC using the supplied USB cable.</li> <li>* See the specification of ZLINK4 for further information.</li> </ul>					
	Software	to manage 4 pcs of	f gauges : Force Log	gger Plus	
<ul> <li>Main features of Force Logger Plus</li> <li>You can connect Max. 4 pcs of force gauges and receive data from them.</li> <li>Using the supplied USB hub, you can easily connect 4 pcs of force gauges.</li> <li>Each data individually shows test date &amp; time, one in charge, by a serial No. of a force gauge.</li> <li>You can save data in CSV format.</li> <li>* Please ask us for the detail of the software.</li> </ul>					of force gauges.
		Digital force gaug	es ZTS/ZTA series		
<ul> <li>Main features of ZTS/ZTA</li> <li>1. ZTS/ZTA improves the reproducibility of measurement due to its high sam rate (2000Hz).</li> <li>2. Clear organic display, 8 language availability, and more useful functions</li> <li>3. You can visually see small changes in force using an optional graphing software of the second seco</li></ul>			eful functions al graphing software.		
Handle : FOH-1		RS232C cable	(9P) : CB-203	Replacement b	attery : BP-403
	Combining a force gauge with this handle by screws, you can apply force stably.		The cable connects a PC to a force gauge, enabling to transmit command signals.		You can open the battery cover of DSV/DST, and replace it very easily.

#### IMADA CO.,LTD Simple type digital force gauge DSV/DST series



## [Dimensions]

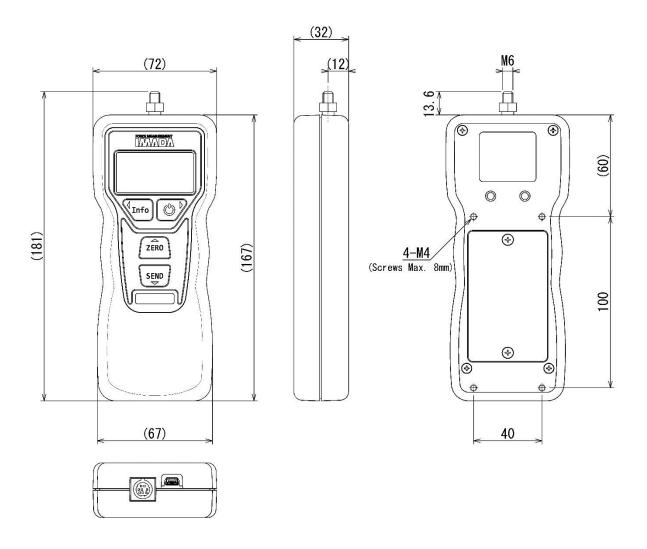

### [Calibration certificate & ISO 17025 calibration services]

As an option, we offer calibration certificates and traceability charts with extra charges.

Moreover, we can offer calibration services according to ISO/IEC17025: 2005. Contact us if you need internationally acceptable calibration data.

Contact: +81-(0)532-33-3288 or <u>info@forcegauge.net</u> (customer service group)

#### [Cautions]

- The contents may be changed without previous notice.
- All of products are designed for measurement purpose only.
- Do not copy and use this content without authority.
- Please note if you add load over capacity, or add force from side or torsion, its sensor would be broken down.